



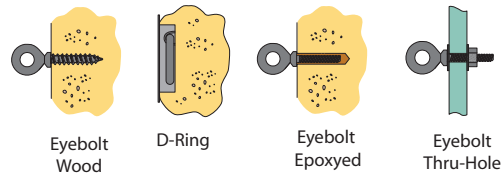

OPN Installation Instructions Quick Reference

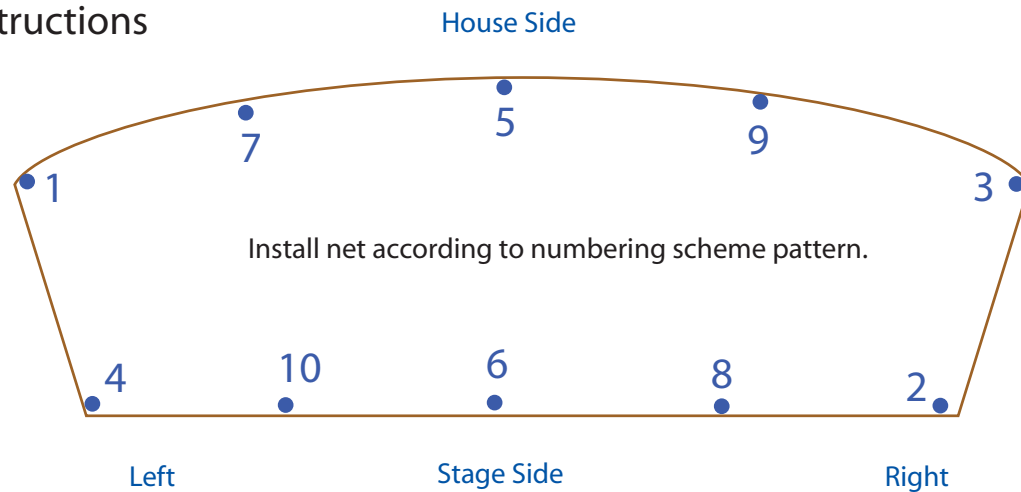

- The anchors are to be mounted to a structurally sound surface, typically 2 ft O.C. or closer - refer to plan drawings.
- Anchors must have working load strength of 500 lb
- The order of installing the net/hooks to the attachment points is in a cross pattern as shown. This will allow the net to stretch evenly during installation.
- Follow the order of installation for the remaining hooks and anchors. This is most important when installing the net for the first time.

